



ORDERING THE RIGHT SIZE WINDOW UNIT

1. Measure Room To Find Area

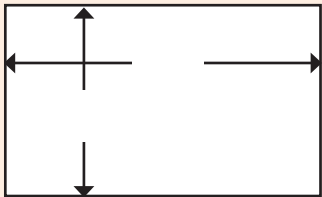

2. Match Area to BTUs

3. Choose Unit Type

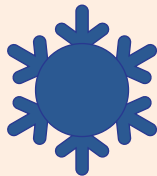

Straight Cool

